


Temperature Sensor Instructions


Installation Instructions

The Boat Command Temperature Sensor comes ready to install. All you need to do is connect the three wires from the temperature sensor to the corresponding wires in the Boat Command harness.

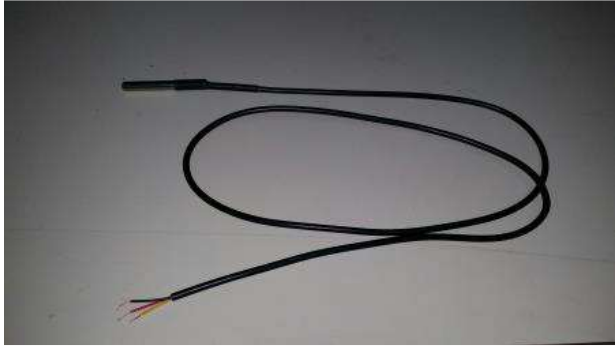

Wiring Guide

- Yellow wire -- connect to the device harness's white/blue control wire
- Red wire -- connect to the device harness's orange control wire
- Black wire -- connect to the device harness's black control wire

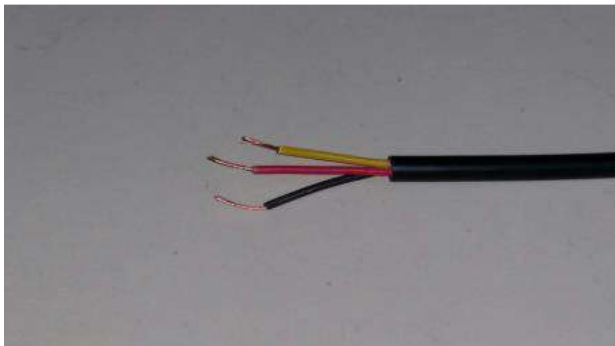

Once it's connected to your harness and plugged in, internal temperature will automatically appear on your app dashboard. To test, request an update from the vehicle or vessel, wait 30 seconds, and refresh your app or web page. It may take a few hours for it to automatically sync the first time.

TIP: If you want to position the Temperature Sensor at a location farther away than the length of the included wires, simply use similar type wire to extend the length. It will function normally up to 20 feet away.